 


"Smart Card" Washer Instructions

STEP 1 Set Fabric Selector and Wash Temperature:

 
Push Touch Pad for:

- * NORMAL / HOT
- * NORMAL / WARM
- * PERM PRESS / WARM
- * DELICATES / COLD

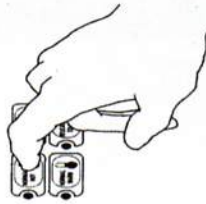

STEP 2 Add Laundry Supplies:

- Open Dispenser Drawer.
- Add 1/4 Cup Liquid (Best) or Powder Detergent into section #1.
- Bleach into section #2
- Softener into section #3

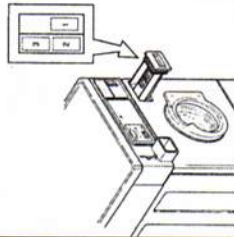

NOTICE - AVOID OVERSUDSING 1/4 CUP OF DETERGENT IS ENOUGH!

 


STEP 3 Load Laundry

Open washer Door and place laundry loosely into wash drum.



DO NOT OVERLOAD !

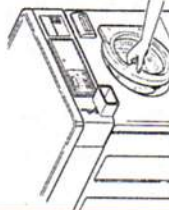

STEP 4 Close Loading Door

Close Loading Door tightly.
The washer will not operate with the loading door open.

STEP 5 Insert Card

 
Insert your Laundry Card into the Card Slot.

DO NOT USE COINS OR BILLS.



STEP 6 Start Washer

Push the **START** Button.
Remove your Card.

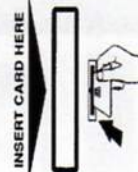

Lights will indicate WASH, RINSE, & SPIN CYCLES

 
 
WARNING !

The "DOOR LOCKED" light will be lit when the wash cycle starts.
DO NOT ATTEMPT TO OPEN THE DOOR AFTER THE WASH CYCLE BEGINS.

"Smart Card" Dryer Instructions

STEP 1 Clean Lint Filter

Clean Lint filter before each use

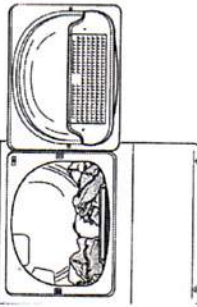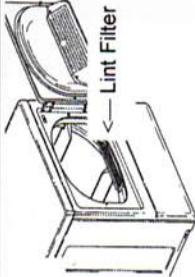

STEP 2 Load Laundry

 
Load clothes loosely into dryer Drum. Add fabric softener sheet if desired.

DO NOT OVERLOAD



STEP 3 Close Loading Door

Close loading Door. Dryer will Not Operate with the door open.

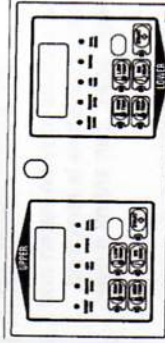

STEP 4 Determine Proper Dryer

The direction of the Arrow Indicates which dryer is being used.

STEP 5 Set Fabric Selector

 
Select:
HIGH TEMP, MED. TEMP
LOW TEMP, NO HEAT, by pushing touch pad.

NOTE: Always follow Clothing Care Label Instructions.



STEP 6 Insert Card

Insert your Laundry Card into the Card Slot.
DO NOT USE COINS OR BILLS.

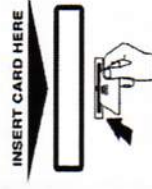

STEP 7 Start Dryer

Push the **START** Button.
Remove your Card.

To stop the dryer at any time—Open the door. To Restart— Close the door and push **START**


Adding value to your "Smart Card"

Two V.T.M. (Value Transfer Machines) are conveniently located in the hallway directly across from the business office.

(1) Insert your card into the card slot. (upper Right)

(2) Insert \$5.00, \$10.00, or \$20.00 ONLY into the Bill Slot. The \$ value will be automatically added to your card.
(Maximum amount that can be put on the card is \$50.00)

 (3) Remove your card. When you see the new, updated balance in the LED read out screen.

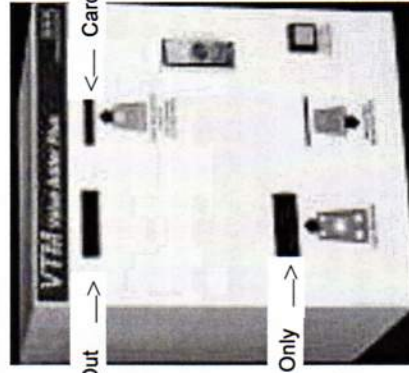

Read Out → Card Slot

\$5, \$10, \$20 Only →

To Purchase a Replacement or Extra "Smart Card":

1. Push the Green "Buy Card" Button
2. Insert 1 \$10.00 Bill or 2 \$5.00 Bills into the Bill Slot.
3. V.T.M. Will dispense Card.

NOTE: The New card will be dispensed with a pre-loaded value of \$6.00. To add additional value to the card — Follow instructions above.